



Data Storage

CooVox-U20/U50/U60/U100

Data Storage is an important feature which is used to avoid any data lost in case of system failure or wrong operation. Especially for enterprise, it looks more important then. ZYCOO Coovox series IP PBXs fully support data storage including: Call Log file; Call recording File; Voicemail File.

There are two ways to make data storage: FTP mode and USB mode.

FTP mode

Applicable to Coovox-U20/U50/U60/U100

Click **【System】** → **【Data Storage】** from PBX GUI:

Data Storage

Data Storage
Data Storage Log

Data Storage

Enable:

Mode: FTP ▼

Server Address: 192.168.1.199

Username: test

Password: ••••••

Directory: .

Automatically upload frequency(day): 2 ▼

Time of automatically upload: 00 ▼ : 00 ▼

Forcibly upload when the flash storage is over: 20% ▼

Save
Cancel

Status: Successfully connect to FTP Server.
Upload Now

| Item | Explanation |
|--|---|
| Enable | Enable Data Storage |
| Mode | Select FTP |
| Server Address | FTP server address |
| Username | FTP username |
| Password | FTP password |
| Directory | FTP server directory |
| Automatically upload frequency (day) | Automatically upload frequency, per day or 2,3... days. |
| Time of automatically upload | Define the specified time to upload automatically |
| Forcibly upload when the flash storage is over | If the flash storage is over the value you set here (20%), it will be uploaded to the ftp server firstly. |

From the settings above, if it is successful the Status will show “ Successfully connect to FTP Server.”

Click the button **“Upload Now”** to upload the file immediately.

USB Mode

(Applicable to CooVox-U50 Only)

Click **【System】** → **【Data Storage】** from PBX GUI:

Data Storage

Data Storage | **Data Storage Log**

Data Storage

Enable:

Mode: USB ▼

Automatically upload frequency(day): 2 ▼

Time of automatically upload: 00 ▼ : 00 ▼

Forcibly upload when the flash storage is over: 20% ▼

Status: **Successfully connect to USB storage device.**

| Item | Explanation |
|--|---|
| Enable | Enable Data Storage |
| Mode | Select USB |
| Automatically upload frequency (day) | Automatically upload frequency, per day or 2,3... days. |
| Time of automatically upload | Define the specified time to upload every time automatically |
| Forcibly upload when the flash storage is over | If the flash storage is over the value you set here (20%), it will be uploaded to the ftp server firstly. |

Plug your USB Stick to the PBX device when the IP PBX is power off, then power on. If USB is normal working, the Status will show **“Successfully connect to USB storage device.”**

Click the button **“Upload Now”** to upload the file immediately.

Check Data Storage Log

After uploaded the files, you can find the data storage logs via click **“Data Storage Log”**:

Data Storage Log

Data Storage

Data Storage Log

Data Storage Log

Refresh Clear

Backup_Date_Time:2014-08-15-09-45
USB Backup Result:
Successfully copy files to USB storage

Note: If you use the USB hard disk, please plug the USB hard disk which support external power supply, then it can work normally.